

BR4/BR20 Remote Battery Change Instructions:

*To verify if the batteries are dead, push the CODE button near the top left of the remote. If the white LED embedded at the top is not lighting up.... then your batteries are most likely dead.

Take off the bottom panel of the remote by removing the two Phillips screws in each corner. Then use a small pair of pliers to pull the green board out and expose the battery compartment. Be aware that the green board slides in and out of the two black rail guides framed into the moulding of the remote. This is best accomplished with the remote turned over and the buttons facing down. (see picture) Change the batteries and put back in reverse order.

**When putting back together... be sure that the IR bulb at the very top of the remote is properly poking out of the top and has not gotten bent inside.*

Test again.

*If the White LED is now lighting up – but the remote is still not working – you may have to re-enter a code.

For BR20 Specific Remote:

Push and HOLD code button for 5 FULL seconds.

(The White LED should light up and let go once it starts to blink)

Then FIRMLY push D7, D9, D5 in sequence

(The white LED should blink twice to say it has accepted the code.)

Try testing remote again after that.

If you have the Universal BR4 Remote:

Make sure you push the DIGITAL, PREAMP or CD button first (based on what product you have) before testing.

If still not working - refer to the BR4 manual for specific product codes:

[BR4 Manual Link](#)

