 




# BR5 Infrared Remote Control Owner's Manual

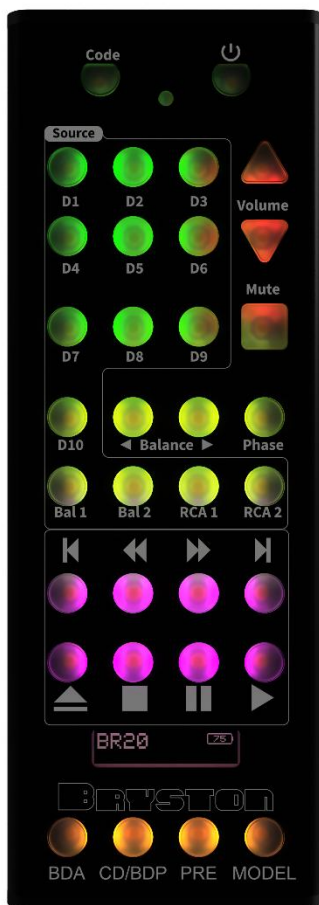

## General

### Welcome

Thank you for your purchase of **Bryston's BR5 Infrared Remote Control**. Among today's numerous options for controlling electronic equipment, the familiar IR remote control remains the most accessible and easy to understand option for the vast majority of listeners. Our BR5 is designed to facilitate access to the most commonly used features in each of your compatible Bryston components.

### BR5 Features:

The BR5 is designed to control virtually all past and present Bryston electronics and to be intuitive to use while maintaining Bryston's legendary durability.

- **Improved Rigid Buttons**
- **Rechargeable Battery (USB C)**
- **Multi-Coloured Backlighting with Motion Sensor.**
- **LCD Display for Configuration**
- **Works with the following models:**

SP1.7, SP2, BP6, BP16, BP17, BP17<sup>3</sup>, BP25, BP26, BP19 & BR20  
(Surround Processors & Preamps)

B60, B100, B135 SST<sup>2</sup>, B-135<sup>3</sup> & Bi200  
(Integrated Amplifiers)

BCD1, BCD3, BDP1, BDP2, BDP3  
(Digital Playback Sources)

BDA1, BDA2, BDA3, & BDA-3.14  
(Digital to Analog Converters)

\*Please NOTE that this remote CANNOT control our **SP3 Processor** at this time.



## Configuring Your BR5

Most Bryston products can be controlled with the BR5 by simply pushing the appropriate product category button near the bottom of the remote.

The 3 choices are BDA, CD/BDP and PRE.

The BDA button will control the standard BDA1, BDA2 and BDA3.

The CD/BDP button will control the BCD1, BCD3, BDP1, BDP2 and BDP3.

The PRE button will control ALL standard Preamps.

## 3 Digit Serial Codes

Discrete serial codes are also available to control various functions of Bryston equipment. Certain codes can be sent through the BR5 remote. (Codes such as upsample ON/OFF or Home Theatre Bypass ON/OFF are examples).

**If applicable, these codes are listed in the manual for each individual product (Not in this manual) so please refer to those specific manuals for any of the relevant codes.**

To send applicable codes by this remote, quickly press and release the CODE button then enter the three digit code in sequence.

## Controlling Your Equipment

If for any reason your remote is not controlling certain aspects of the product properly, you can program the remote specifically for the exact product you own.

\*Please refer to page 3 for the Product Specific Codes.





## Product Specific Code Instructions:

To program your BR5 to a specific product:

Push the **CODE** Button, then enter the **3 Digit** code in sequence, then push the **CODE** button again. The status led will blink blue three times to verify.

Your BR5 has a display and you'll see "code" appear followed by the number you entered.

If it is a valid code, instead of seeing the number, it will get replaced by a short description of what the code does.

## List of Codes and Functions:

- 711: Load SP1.7/SP2 Profiles
- 712: Load B135, B100, BP16 and BP17 Profiles
- 715: Load BCD1 & BCD3 Profiles
- 716: Load BDA1, BDA2 & BDA3 Profiles
- 717: Load BDA3.14 Profile
- 721: Load BP26, BP25 Profiles
- 722: Load B60, BP6 Profiles
- 741: Load BR20 Profile
- 742: Load BP19, Bi200 Profiles
- 794: Shipping Mode (disables the accelerometer until a button is pushed)**
- 795: Resets Remote (useful for setting remote back to default state)**
- 801: Toggle Backlight**
- 802: Toggle Zones (This changes the colour of the backlighting from all white to coloured zones)
- 803: Backlighting 25% Brightness
- 804: Backlighting 50% Brightness
- 805: Backlighting 75% Brightness
- 806: Backlighting 100% Brightness
- 821: Toggle Big Text Mode
- 830: Motion Sensor Off
- 831: Motion Sensor Very Sensitive
- 832: Motion Sensor Medium Sensitivity
- 833: Motion Sensor Weak Sensitivity
- 911: Display Reset
- 921: 100ms repeat delay
- 922: 200ms repeat delay
- 923: 300ms repeat delay
- 924: 400ms repeat delay
- 925: 500ms repeat delay
- 926: 600ms repeat delay
- 931: 5 second sleep
- 932: 10 second sleep
- 933: 15 second sleep
- 934: 20 second sleep
- 935: 25 second sleep
- 936: 30 second sleep
- 990: BR4 Layout
- 991: BR20 Layout

## Battery Charge Instructions

The BR5 Remote can be charged with any standard USB A to USB C cable or USB C to USB C cable.



Plug the USB C side into the bottom of the remote and plug the USB A or USB C side into any compatible port. It can be charged with any 5v +/- 0.5v power source.



*A typical battery charge can last 1 month, but depends on usage and backlight settings.*

# BRVSTON

# Firmware Update Instructions

To update the firmware on the BR5... Connect the remote to a PC/Mac using a USB cable. Open any Internet Browser and navigate to this page:

[support.bryston.com/remote/#/](https://support.bryston.com/remote/#/)


You should see a screen like this:



Connect to your device to view firmware information



Make sure your USB cable is connected to the computer and click the “Connect” button in the top right corner of the screen. Then in the pop up that follows, click on the USB Serial COM listed then click on “Connect” again.

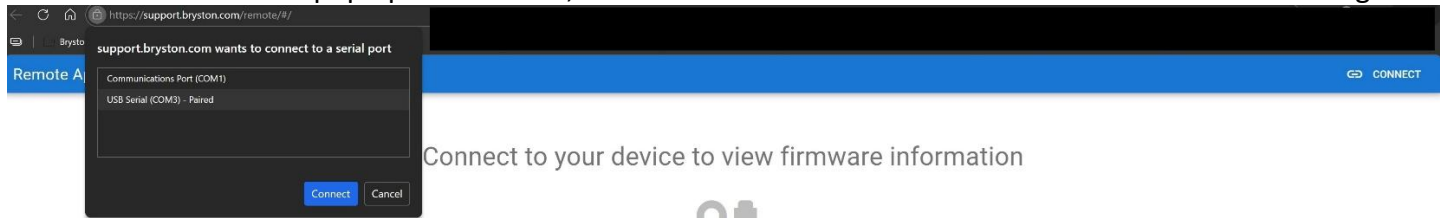

Connect to your device to view firmware information



Then the following page will let you know if new firmware is available and click on the Firmware Update button near the top right and follow the prompts to update.




Device Information		
Device	Button Layout	Battery Level
<b>Bryston BR5</b>	<b>BR20</b>	<b>90%</b>

Firmware Information	
Device Firmware	Latest Firmware
<b>v1.0.12</b>	<b>v1.0.13</b>
<b>Firmware update available</b>	

Backlight Settings
Status
<b>Enabled</b>
Brightness
25% (64/255)
Sleep Delay
15 s



## IMPORTANT SAFETY INSTRUCTIONS

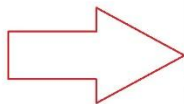

The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES OR GLASSES OF LIQUID ARE PLACED ON OR NEAR THE EQUIPMENT.

---

### BRYSTON LIMITED WARRANTY

Bryston Analog Products are warranted to be free from manufacturing defects for ten (10) years from the original date of sale.

The warranty includes parts and labour.

Bryston Digital Products and Remotes are warranted for five (5) years from the original date of sale. The warranty includes parts and labour.

Bryston Products having motorized moving parts, excluding motorized volume controls, (ie: Bryston CD Players) are warranted for three (3) years from the original date of sale. The warranty includes parts and labour.

Bryston will remedy the problem by repair or replacement, as we deem necessary, to restore the product to full performance. Bryston will pay only return shipping costs for the full length of the specific products warranty.

In the event of a defect or malfunction, contact Bryston’s repair centers for return authorization. Products must be returned using original packaging material only.

Packing material may be purchased from Bryston if necessary. This warranty is considered void if the defect, malfunction or failure of the product or any component part was caused by damage (not resulting from a defect or malfunction) or abuse while in the possession of the customer. Tampering by persons other than factory authorized service personnel or failure to fully comply with Bryston operating instructions voids the warranty. This warranty gives you specific legal rights and you may also have other rights which may vary from province to province and country to country. As of 2026-01-01 Bryston will only warranty Bryston products purchased through authorized Bryston dealers and must be accompanied by a copy of the bill-of-sale to qualify for warranty service. The warranty is transferable from the original owner to a subsequent owner as long as a copy of the bill-of-sale from the original authorized Bryston dealer accompanies the re-sale. The copy of the bill of sale to any subsequent owner need ONLY include the Name of the Bryston Authorized Dealer and the Model and Serial number of the Bryston product. The warranty will only be honored in the country of the original purchase unless otherwise pre-authorized by Bryston.

---

### \*Contact Bryston FIRST for Return Authorization

#### BRYSTON SERVICE in CANADA:

[bryston.com/service-and-warranty/](http://bryston.com/service-and-warranty/)

Phone: 705-742-5325

Toll Free: 1-800 632-8217

Postal address:

2885 ON-60

DWIGHT, ONTARIO,

CANADA

POA 1H0

#### BRYSTON SERVICE OUTSIDE Canada:

contact your local dealer/distributor or:

CHECK OUR WEB SITE DIRECTLY:

[bryston.com/dealer-locator/](http://bryston.com/dealer-locator/)

[bryston.com/service-and-warranty/](http://bryston.com/service-and-warranty/)

Toll Free: 1-800 632-8217